


AIP DUTCH CARIBBEAN

AREA CHART
CURAÇAO/BONAIRE

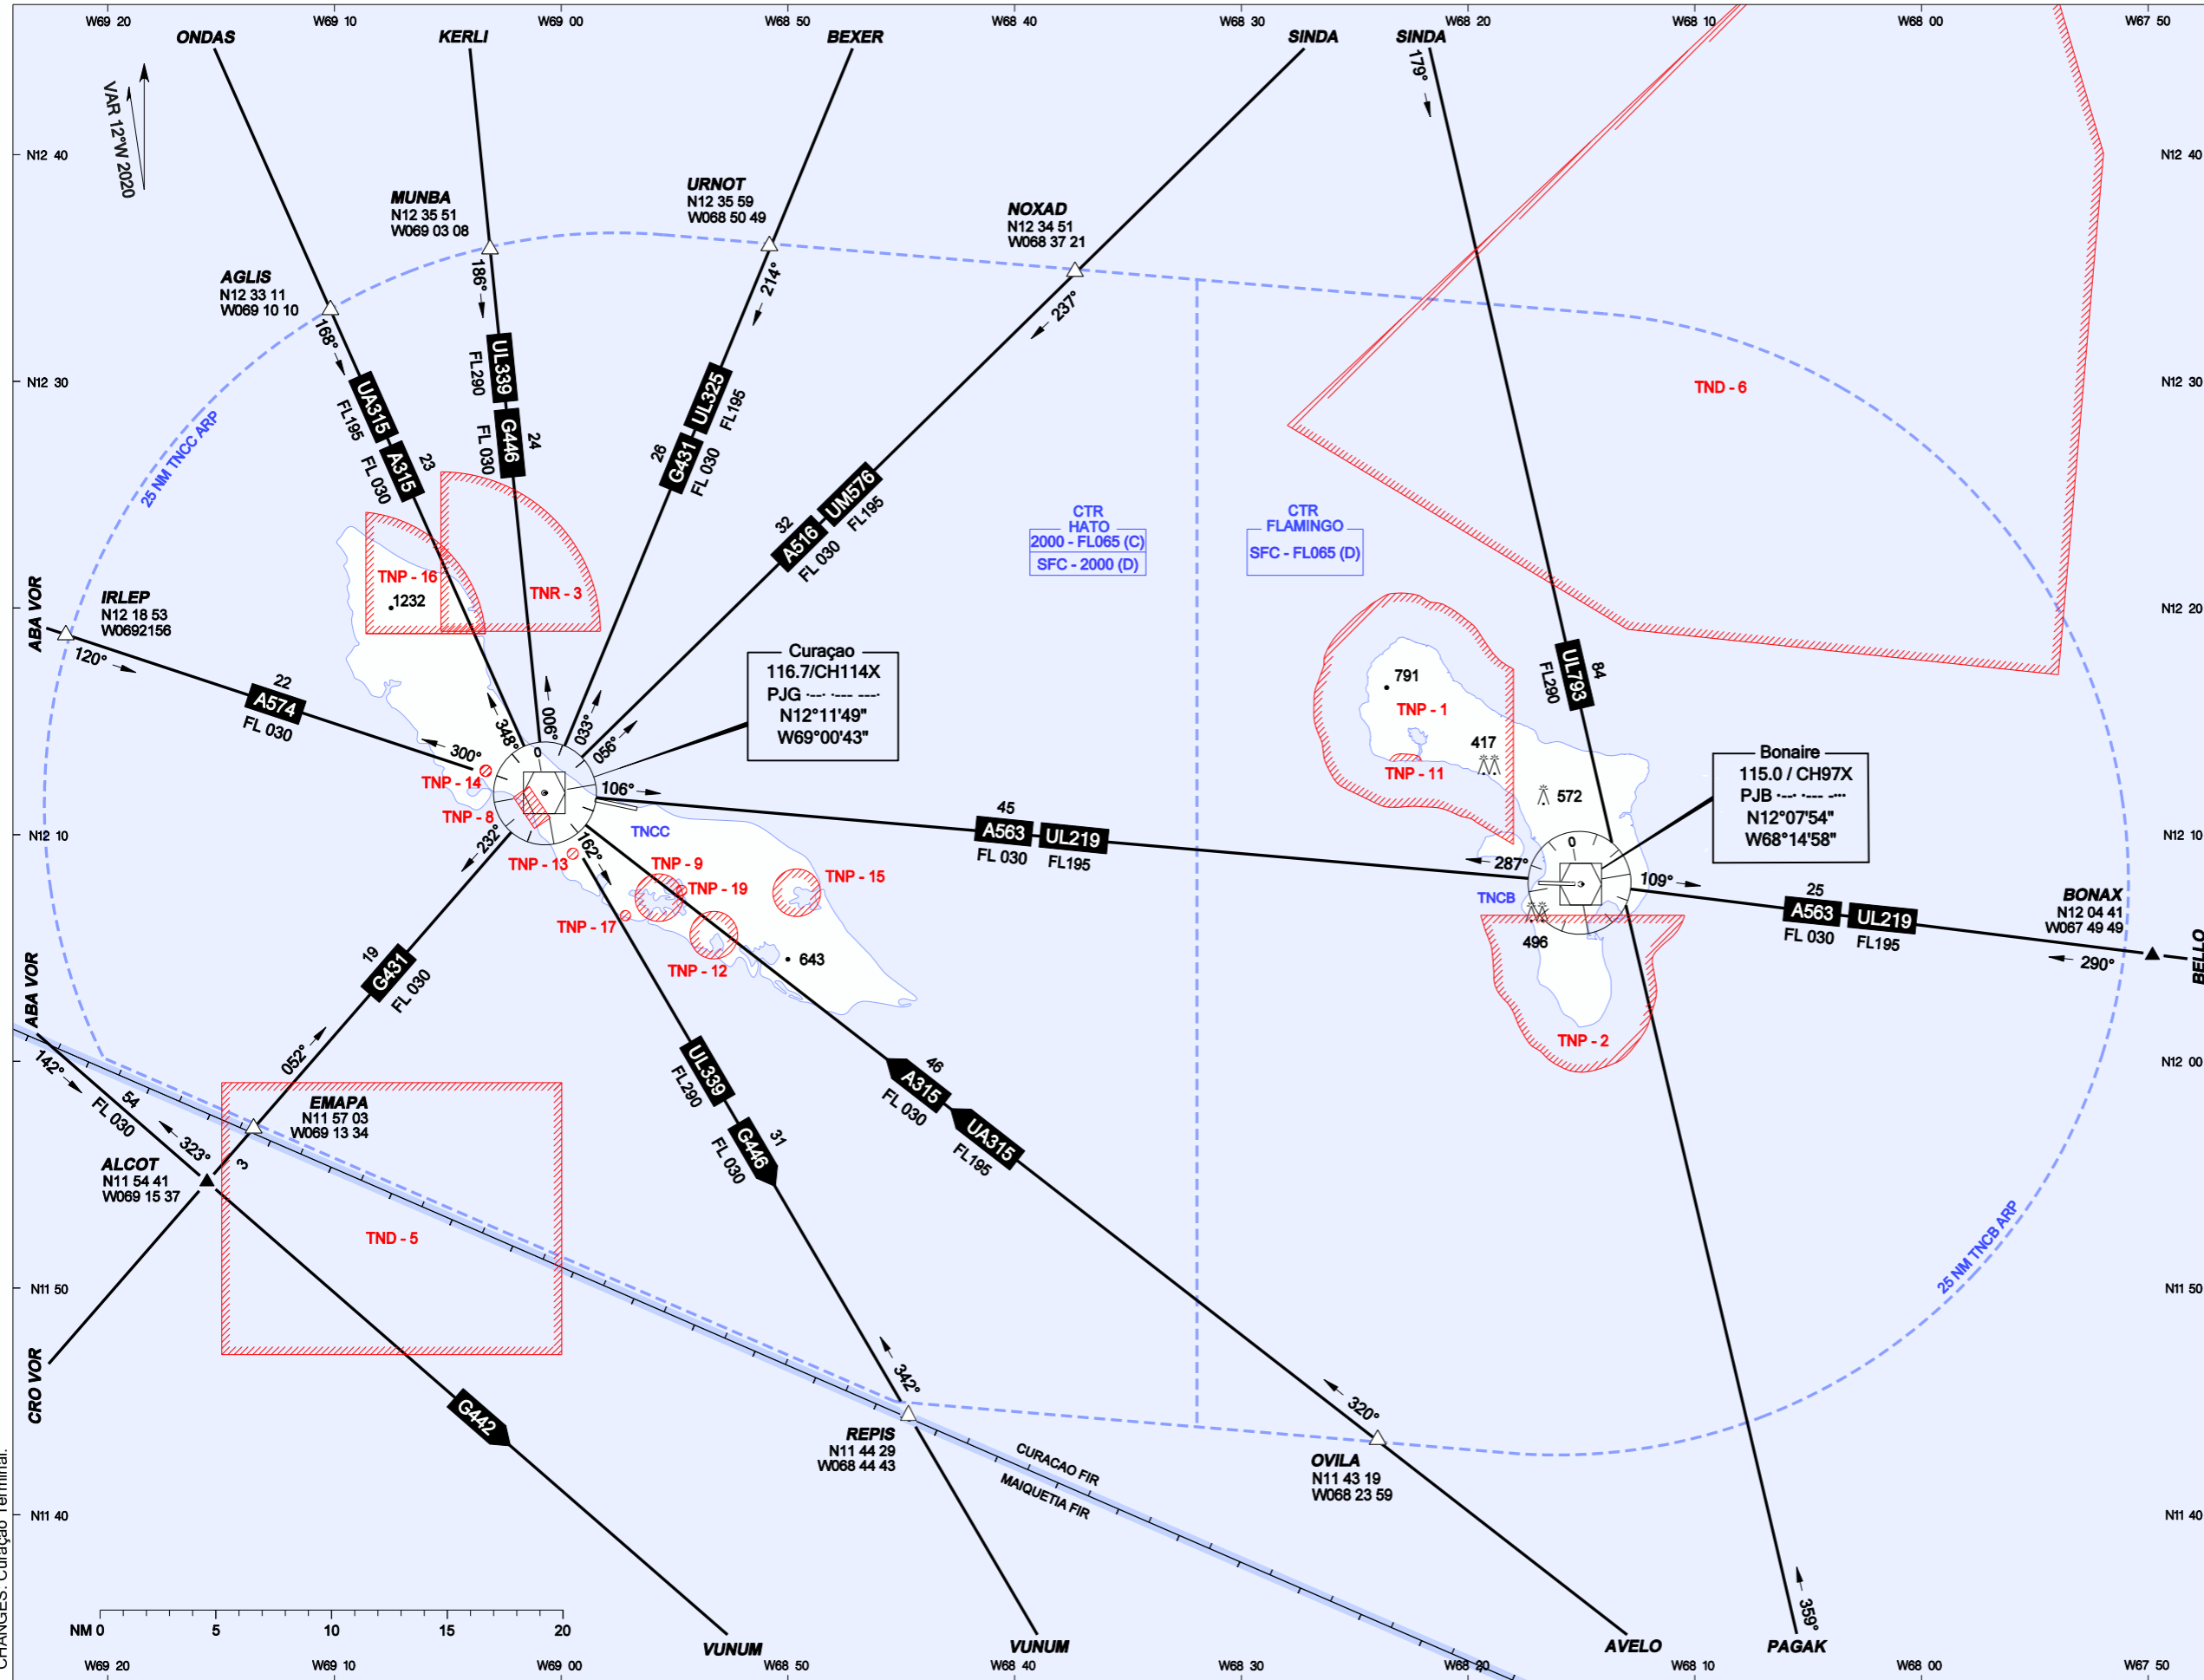

COMMUNICATION	
Curaçao Control	124.1/127.1
Curaçao Terminal	119.8
Hato Curaçao International Airport (TNCC):	
TWR	118.3
ATIS	132.6
Flamingo International Airport (TNCB):	
TWR	118.7
ATIS	132.3

NOTES

- PJG VOR declination 12° W
- PJB VOR declination 12° W
- Altitudes and elevations in feet, distances in NM, bearings are magnetic.
- RNAV 5 required for UA315, UL339, UL325, UM576, UL219 and UL793.

SPECIAL USE AIRSPACE		
TNP-1	SFC - 6000	Flamingo sanctuary
TNP-2	SFC - 6000	Flamingo sanctuary
TNP-8	SFC - 400	Bullenbay oil terminal
TNP-9	SFC - 2500	Isla oil refinery
TNP-11	SFC - 2500	Oil terminal
TNP-12	SFC - 2500	Penitentiary
TNP-13	SFC - 2500	Flamingo sanctuary
TNP-14	SFC - 900	Flamingo Sanctuary
TNP-15	SFC - 2500	Bird sanctuary
TNP-16	SFC - 2500	Wildlife sanctuary
TNP-17	SFC - 2500	Utility plant
TNP-19	SFC - 2500	Utility plant
TNR-3	SFC - NOTAM	Ground/air firing
TND-5	SFC - 10000*	Naval air exercises
TND-6	SFC - 27000*	Gunnery/missile firing

*by NOTAM

LEGEND	
	Isogonic line
	Area chart boundary
	On-demand reporting fix
	Compulsory reporting fix
	Fly-by on-demand reporting wpt
	Fly-over on-demand reporting wpt
	Fly-by compulsory reporting wpt
	Fly-over compulsory reporting wpt